



冠品塗裝設備股份有限公司

產品說明書

產品型號：HFR-400、HFR-250、HFR-100
高壓塗料調壓器、中壓塗料調壓器、次中壓塗料調壓器



說明書編號：MHFR-400CHGP


功能說明：



技術資料：

入口口徑	G 3/8
出口口徑	G 3/8
壓力錶連接口徑	1/4" PT
最高使用壓力	HFR-100 : 100bar (1450psi)
	HFR-250 : 250bar (3625psi)
	HFR-400 : 400bar (5800psi)
最大管制流量	HFR-100 : 2.5 GPM (9.4 LPM)
	HFR-250 : 3.9 GPM (14.8 LPM)
	HFR-400 : 5 GPM (18.8 LPM)
接液材質	SUS304、Teflon
適用溫度範圍	40 - 212F (4.4 - 100°C)
淨重	1950 (g)
壓力調整範圍	HFR-100 : 0~100 bar
	HFR-250 : 20~250 bar
	HFR-400 : 50~400 bar

分解圖：

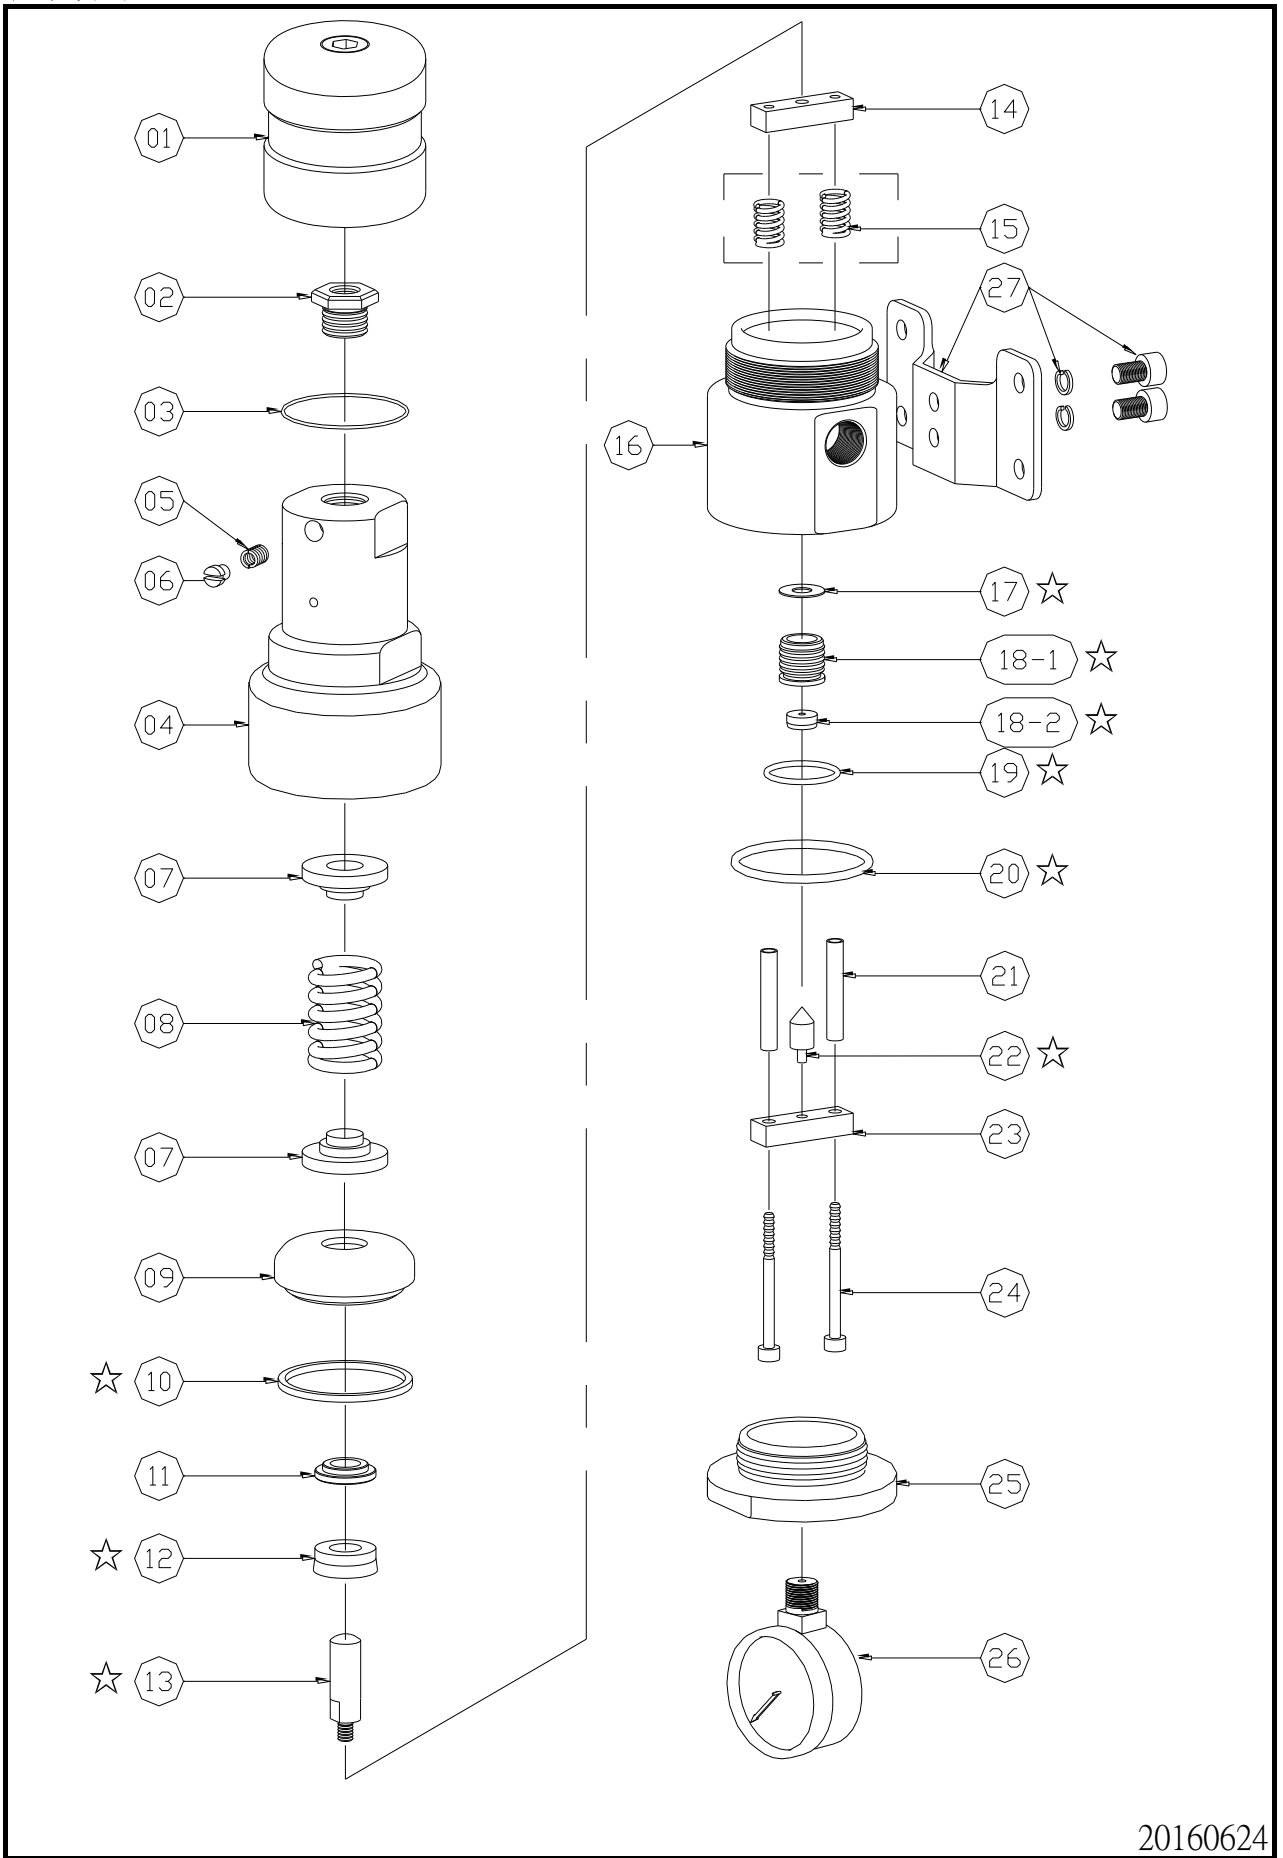

零件表：

No.	Part No.	Description	Qty
01	FR-0001	紅色調鈕	1
02	BR-0002	上蓋螺絲	1
03	FR-0016	白鐵環	1
04	BR-0003	上座	1
05	FR-0017	彈簧	1
06	FR-0018	調鈕頂塊	1
07	LB-014	彈簧壓片	2
08	FR-0021	彈簧, 100kg HFR-100	1
	FR-0022	彈簧, 250kg HFR-250	
	FR-0002	彈簧, 400kg HFR-400	
09	BR-0006	U型槽座	1
☆ 10	BR-0007	墊片	1
11	BR-0021	槽墊	1
☆ 12	BR-0022	U型迫緊	1
☆ 13	FR-0003A	頂桿	1
14	FR-0005	上拉塊	1
15	FR-0015	彈簧 HFR-100 (HFR-250、HFR-400無此零件)	2
16	FR-0006	主座	1
☆ 17	BR-0014	墊片	1
☆ 18-1	BR-0032	鎢鋼鎖座	1
☆ 18-2	BR-0031	鎢鋼環 ψ 10*2.2	1
☆ 19	O-11x2V	O型環	1
☆ 20	FR-0012	O型環	1
21	FR-0008	套管	2
☆ 22	FR-0007	頂針	1
23	FR-0009	下拉塊	1
24	SWB-M4x45(15)-S4	螺絲	2
25	FR-0020	下蓋	1
26	025-L-A-100	壓力錶, 100kg HFR-100	1
	025-L-A-300	壓力錶, 300kg HFR-250	1
	025-L-A-350	壓力錶, 350kg HFR-400	1
27	FR-0026	固定架組(選配)	1
☆	FR-0014	修理包	

20160624